



PULIZZI ENGINEERING INC.

3200 S. Susan Street, Santa Ana, CA 92704-6865 (714) 540-4229 FAX: (714) 641-9062
E-MAIL#: sales@pulizzi.com HOMEPAGE (URL): http://www.pulizzi.com
SALES: (800) 870-2248 FAX: (605) 334-4999 or (605) 334-2611

IPC36xx Login 'Back Door' Access

- 1) Connect a computer to the IPC36xx via a serial connection to a computer
- 2) Start a terminal program such as Hyper Terminal with the settings for the IPC36xx connection.
- 3) Cycle power to the unit
- 4) Press enter as soon as the login screen below appears.

```
Pulizzi Engineering, Inc.  
Power Distribution and Remote Managment  
Support and Sales:  
Call: (605)334-8999  
Email: sales@pulizzi.com  
NET+WORKS Version 6.0  
PLATFORM: IPC3600  
APPLICATION: Pulizzi IPC3600 Firmware  
-----  
NETWORK INTERFACE PARAMETERS:  
IP address on LAN is 172.30.1.33  
LAN interface's subnet mask is 255.255.0.0  
IP address of default gateway to other networks is 172.30.1.254  
HARDWARE PARAMETERS:  
Serial channels will use a baud rate of 9600  
This board's MAC Address is 00:04:F3:00:21:54  
After board is reset, start-up code will wait 5 seconds  
Default duplex setting for Ethernet connection: phy Default  
-----  
NVRAM Format. START_OF_FREE_NVRAM=0x140  
Press any key in 5 seconds to change these settings.
```

Press A to Accept the settings, or M to Modify? M

- 5) Type 'M' to modify the settings
- 6) Enter the password 'ipcxxxxx' where xxxxxx is the last 6 numbers of the units mac address (without the colons). In the below example the password would be 'ipc002154'.

```
HARDWARE PARAMETERS:  
Serial channels will use a baud rate of 9600  
This board's MAC Address is 00:04:F3:00:21:54  
After board is reset, start-up code will wait 5 seconds
```

- 7) Enter through the settings until the unit prompts the question to update the root password. At this point type 'Y' and change the password.
- 8) Enter through the remainder of the settings and let the unit restart. This time let the unit pass through the initial setup menu.